

- 請為RAC-4600N選用漢軍RS-485或Wiegand格式讀卡機。
- 詳細資訊內容請參閱產品手冊。

www.hundure.com

4 Connection / 接线/接線

JP1

INITIAL

NORMAL

JP2

T2

WIEGAND

JP3~6

NO

NC

JP1: Jumper setting for hardware initialization. Please be reminded to turn.
JP1: 硬件初始化设定,初始化完毕,请务必将JP1移回到Normal位置。
JP1: 硬體初始化設定,初始化完畢,請務必將JP1移回到Normal位置。


JP2: Jumper setting for selection of T2 or Wiegand Interface reader.
JP2: 调整控制主机外接读卡机的传输格式。
JP2: 調整控制主機外接讀卡機的傳輸格式。

• We suggest to set relay to “NO” mode for the connection of f1. Electric Strikes2. Apartment Lock.
• We suggest to set relay to “NC” mode for the connection of f1. Electric Bolt Lock2. Electromagnetic Lock
• Under normal situation we suggest to set ALARM relay 5-8 in “NO” mode.


• 断电开门的电子锁应调整为NC状态,如阳极锁、磁力锁等。
• 通电开门的电子锁应调整为NO状态,如阴极锁、公寓电锁等。
• 一般警报器都属于通电启动的方式,relay 5-8警报器固定为NO模式。

• 斷電開門的電子鎖應調整為NC狀態,如陽極鎖、磁力鎖等。
• 通電開門的電子鎖應調整為NO狀態,如陰極鎖、公寓電鎖等。
• 一般警報器都屬於通電啟動的方式,relay 5-8警報器固定為NO模式。


Step 1 Power Connections / 电源接线/ 電源接線

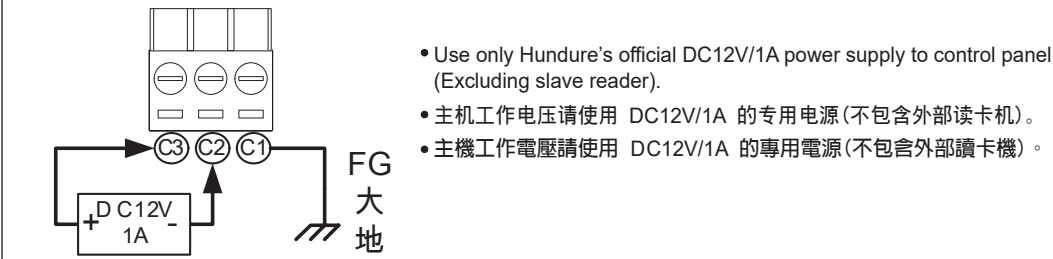

Step 2 Communication / 通讯接线/ 通訊接線

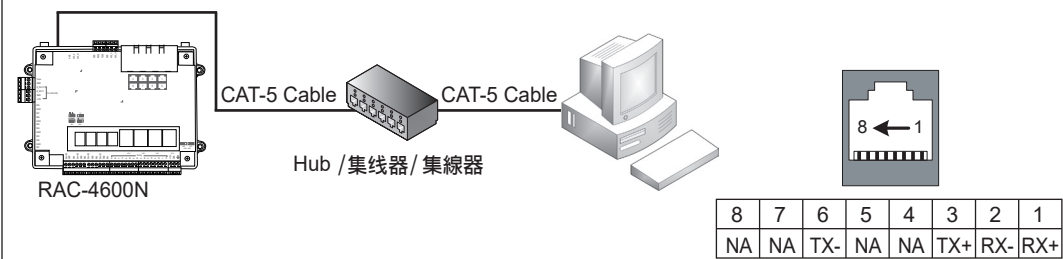

Place the Software CD on the CD ROM. Execute 830Tool.exe and the window on the left will appear:
1. Click on “Search” button to locate the control panels over the network. Returned results will be shown in the device list area.
2. Select a device to modify settings.
3. Enter new IP, Submask, Gateway and Port No..
4. Press “Broadcast Setup” button to complete the settings.
5. Kindly wait for 10-20 sec before searching the device again. Check if the parameters are correct and successfully modified.

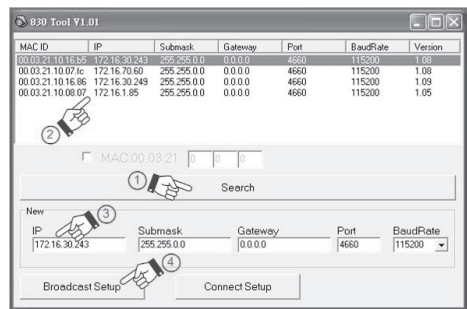


将光碟片放入光碟机, 搜寻830Tool.exe并且执行程式, 执行後画面如右:


1. 按“Search”按钮搜寻网路上相容的装置设备, 搜寻结果会显示在视窗上。
2. 点选所要修改的装置设备将其项目反蓝。
3. 输入新的 IP 、Submask、Gateway以及通讯埠号。
4. 按下“Broadcast Setup”按钮完成设定。
5. 请稍後10~20秒後再重新搜尋一次, 确认修改後的设定值是否正确。

將光碟片放入光碟機, 搜尋830Tool.exe並且執行程式, 執行後畫面如右:


1. 按“Search”按钮搜尋網路上相容的裝置設備, 搜尋結果會顯示在視窗上。
2. 點選所要修改的裝置設備將其項目反藍。
3. 輸入新的 IP 、Submask、Gateway以及通訊埠號。
4. 按下“Broadcast Setup”按钮完成設定。
5. 請稍後10~20秒後再重新搜尋一次, 確認修改後的設定值是否正確。

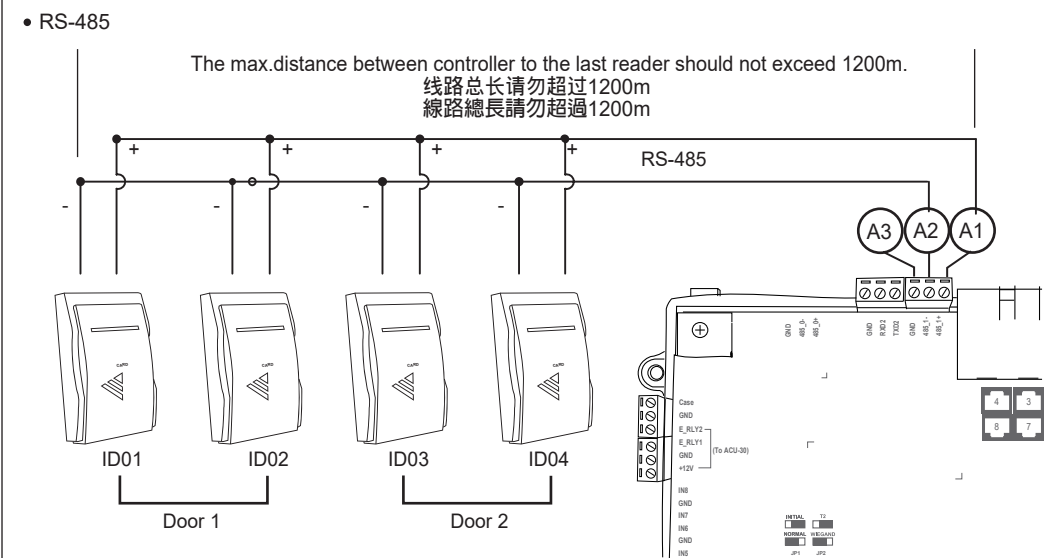

- Wiegand Reader Connection / Wiegand读卡机介面接法 / Wiegand讀卡機介面接法
- We suggest to use the CAT-5 ethernet cable. / 建议使用CAT-5网路线 / 建議使用CAT-5
- Don't connect to ethernet to avoid damage. / 勿接乙太网路, 以免造成损坏 / 勿接乙太網路, 以免造成損壞

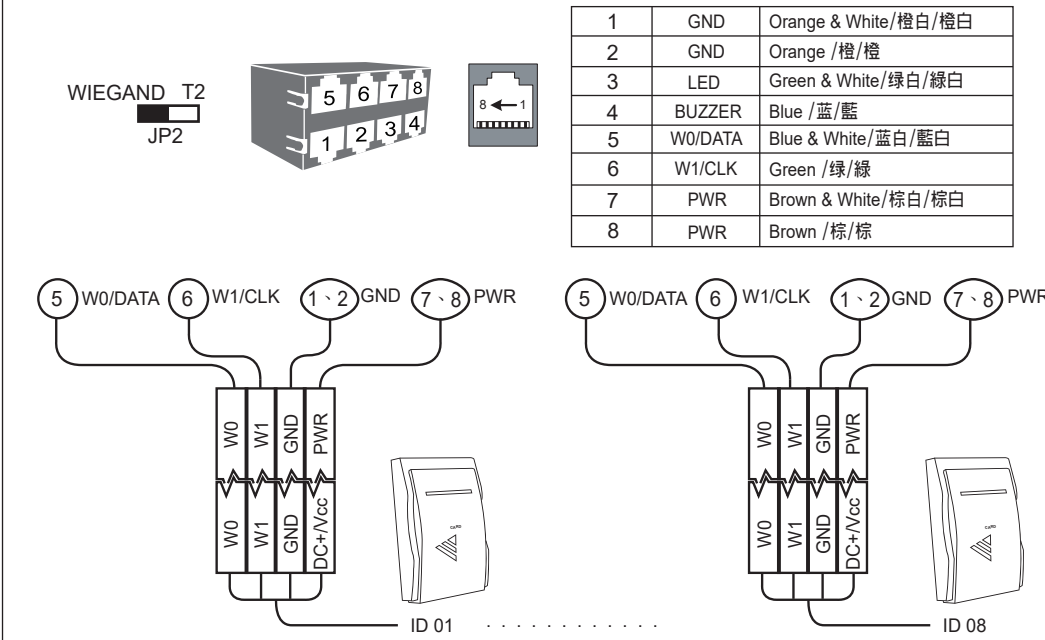


- ABA Track2 Reader Connection / ABA Track2读卡机介面接法 / ABA Track2讀卡機介面接法

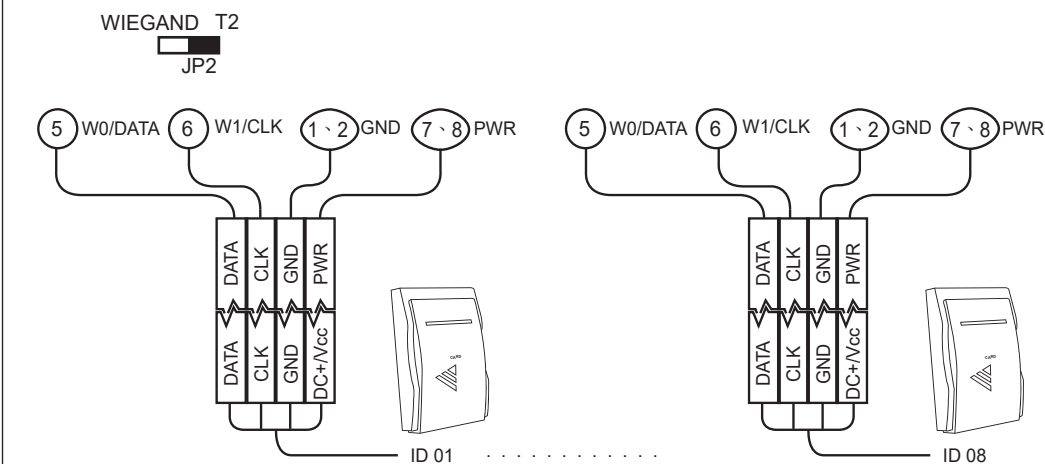


Step 3 Others / 其他/ 其他

Please separate power supply of control panel, electric locks and security alarms.
电子锁、警报器等外部装置, 请勿与控制主机共用直流电源。
電子鎖、警報器等外部裝置, 請勿與控制主機共用直流電源。

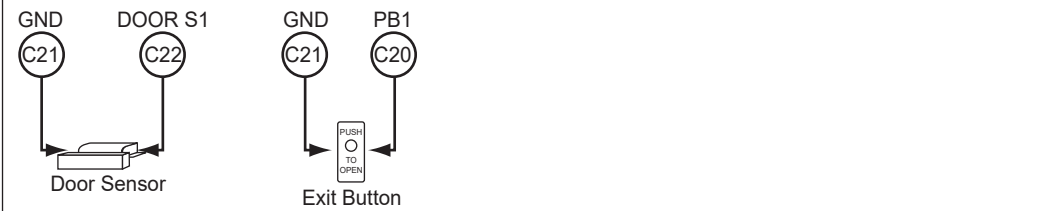

See the wire connections illustrated above are for DoorS1and PB1; for DoorS2~4 and PB2~4 wire connections, kindly refer to the Layout section on the front page.

上图接线以DoorS1及 PB1为范例, DoorS2~4及PB2~4 请自行参考前页配置表的功能定义。
上圖接線以DoorS1及 PB1為範例, DoorS2~4及PB2~4 請自行參考前頁配置表的功能定義。

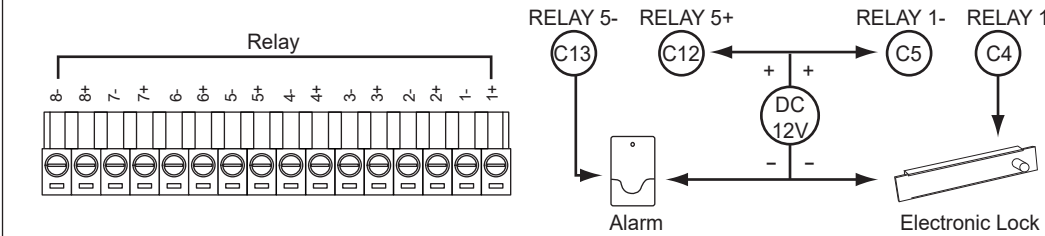

Relay 1~4 is Door Relay Output. Relay 5~8 is Alarm Relay Output.
See the wire connections illustrated above are for Relay 1and Relay 5; for Relay2~4and Relay 6~8 wire connections, kindly refer to the Layout section.

Relay 1~4 为Door Relay 输出。 Relay 5~8为Alarm Relay 输出。
上图接线以Relay1及 Relay 5为范例, Relay2~4及Relay 6~8 请参考范例接法。
Relay 1~4 為Door Relay 輸出。 Relay 5~8為Alarm Relay 輸出。
上圖接線以Relay1及 Relay 5為範例, Relay2~4及Relay 6~8 請參考範例接法。

5 Testing / 测试/ 測試

